



AUTODONER®

The Original Automatic Vertical Broiler

Made in the U.S.A. Since 1972


ENGINEERED FOR PERFORMANCE

INSTALLATION - OPERATION - MAINTENANCE



**MODEL #
3PE**

**MEAT
CAPACITY
65 LBS**

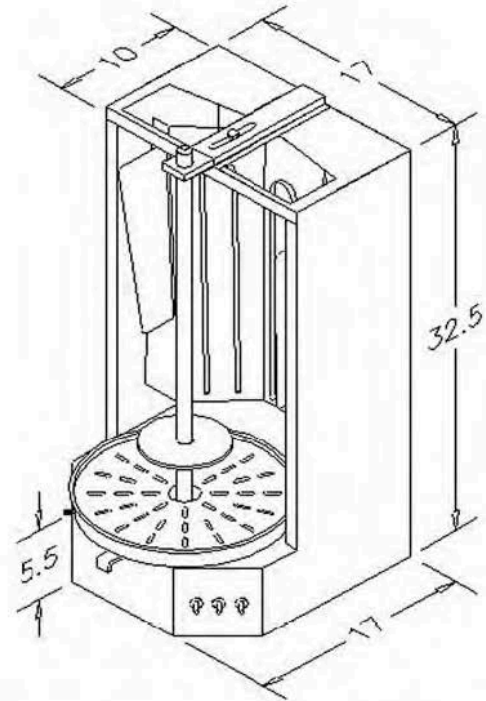

HEIGHT	WIDTH	DEPTH	ELECTRICAL	SHIP WEIGHT
32.5"	17"	17"	208V/1PH/26AMP or 240V/1PH/21AMP Please specify when ordering	70 lbs.

THIS APPLIANCE IS FOR COMMERCIAL USE AND NOT FOR HOUSEHOLD USE.

FOR YOUR SAFETY

Keep gasoline and other flammable vapors and liquids away from this or any other appliance.

Keep this appliance and the surrounding area free of combustibles.

Keep the vent holes on the top and back of this unit free of obstructions to provide proper airflow for combustion and ventilation.

INCLUDED IN BOX



#11601 - Skewer Complete




#12000 - Catch Pan

Drip Pan



Drip Pan Cover

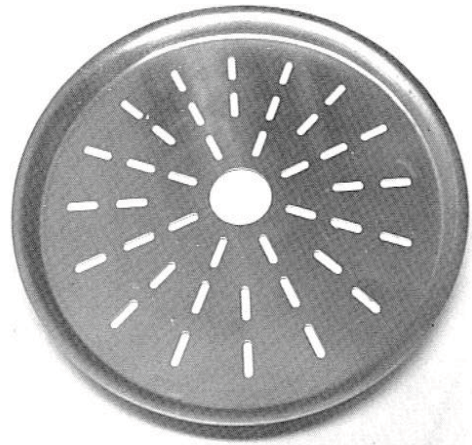

INSTALLATION

This appliance is for counter-top placement. **WARNING – RISK OF FIRE: Do not install closer than 3” to rear and 3” to sides.**

Make sure the voltage on the rating plate of the Autodoner is the same (240 VOLTS or 208 VOLTS) with the voltage in your restaurant. Consult your electrician for proper installation. Installation must be in accordance with all local codes and national electrical codes. Use the three individual switches in front of the machine to turn on heaters.

CAUTION for 240 Volts do not connect to a circuit operating at more than 150 volts to ground.

COOKING AND HANDLING INSTRUCTIONS

(FOR GYROS, DONER KEBAB, & SHAWARMA)
Please Wash All Accessories Before First Use

As you well know, when dealing with raw meat, strict adherence to accepted cooking directions is mandatory. The following directions covering the cooking and serving of Meat Cones, which comes from Public Health sources all over the country, will provide you with all the information you need to serve your customers a consistent delicious and safe sandwiches.

LOADING MEAT CONES:

1. Place skewer through hole in cone, with smaller diameter of cone supported on the round disk of the skewer.
The higher the meat is placed on the skewer, the faster it cooks. **ALWAYS LOAD FROZEN, NEVER THAW.**
2. Pull out the upper and lower skewer supports. Place skewer through the upper support first and then lower the skewer through the drip pan to engage the motor drive.
3. Adjust upper and lower supports so that the meat is 4"–5" away from the heating element.
4. Meat turns very slowly. If the cone is not turning, the lower part of the skewer may not be seated in the motor hole properly.

COOKING MEAT CONES:

1. Turn the motor and burners on and let cook until browned outside. **ATTENTION: MAKE SURE THE MEAT YOU SERVE IS FULLY COOKED! (Minimum Internal Temperature of 158° or higher for Beef & 170° for poultry or pork). We suggest that you further cook any poultry or pork product on a hot grill to ensure a 170° temperature.**
2. A "probe type" food thermometer must be kept readily available and routinely used to monitor food temperatures during preparation and storage.
3. Slice the meat thin as possible with a 14" straight edge beef slicer or electric slicing knife.
4. The meat cone must cook continuously until completely carved. The cooking may be stopped to allow for safety during the carving action only; **(UNDER NO CIRCUMSTANCES CAN THE BROILING UNIT BE TURNED OFF AND ON DURING THE DAY TO COMPENSATE FOR SLOW SALES PERIODS).**
5. If undercooked meat is cut it **MUST BE PLACED ON A GRILL/GRIDDLE AND ALLOWED TO FULLY COOK.**
6. The size of the cone should be determined by business volume demand. The expected time for the total cooking of the Gyros cone is 3-4 hours.
7. All sliced meat must be held at 165° F. or above in a steam cabinet until served.
8. Knives and catch pans must be cleaned and sanitized before use and after cuts are made that are deep enough to penetrate or slice into undercooked meats.
9. At the end of the day, all remaining meat **MUST** be cooked and carved. No cooked meat can be taken off the skewer and refrigerated. The cooked slices must be held under refrigeration at 45° F. or below in shallow covered pans.
10. All leftovers must be heated rapidly the following workday to minimum of 165° F. until served. (Grill, Microwave, etc.)

For consistent, quality product, please insure that your operation strictly adheres to the preparation directions listed above.

MAINTENANCE

CAUTION disconnect from power supply before servicing.

This appliance should be cleaned regularly.

Removable parts (skewer, catch pan, drip pan, meat base, and heat shields) can be run through the dishwasher with your other pots and pans.

Oven cleaners (e.g., Easy-Off) may be used to clean stainless steel surfaces. **Care should be exercised not to get oven cleaner on elements. They may be protected by covering them with aluminum foil.**

Do not soak unit with water as this may damage electrical parts inside.

The motor bearing is permanently lubricated, and it does not require maintenance.

No other maintenance is required.



120 Stanley St., Elk Grove Village, IL 60007
Toll Free Phone: 888-878-9611
Fax: 847-439-9115
www.autodoner.com

PARTS AND ACCESSORIES



#12840 - Motor Switch



#12810 - Motor 220V



#12820 - Flange Bearing



#10503 - Element Switch



#10518 - Heating Element 208V

#10519 - Heating Element 240V



#12860 - Indicator Light



#11640 - Skewer Stand



#12010 - Gyros Knife 14" Blade



#20000 - Super Gyros Knife Stainless (80mm Blade)

#20001 - Super Gyros Knife Plastic (65mm Blade)