



1

STEP 1: HOOD WILL COME FURNISHED WITH A 6" RISER ALREADY INSTALLED. THIS RISER WILL BE 1" TALLER THAN THE FLASHING.

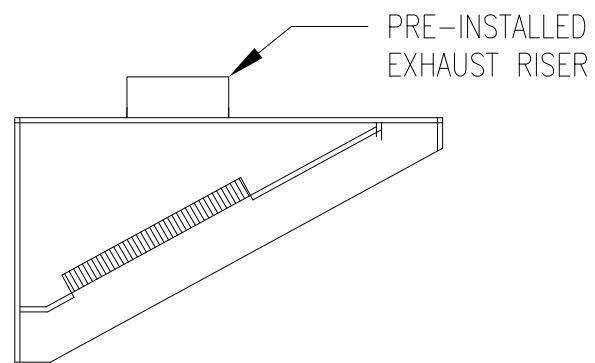

STEP 2: CUT OUT ROOF HOLE AND MOUNT HOOD TO THE WALL AREA


2

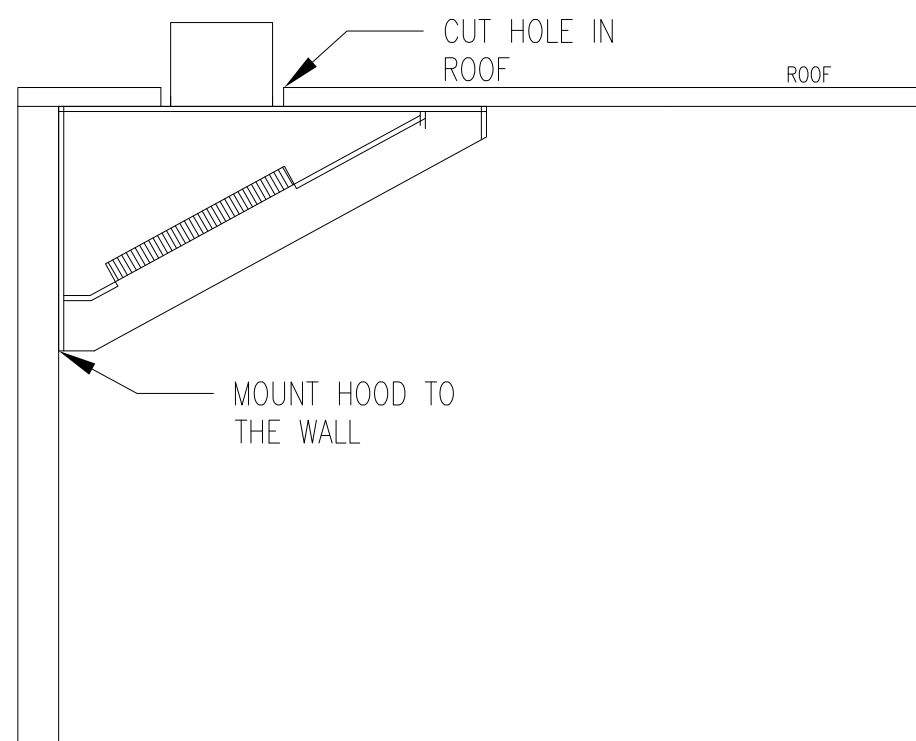

3

STEP 3: PLACE 3" FLASHING ON TO THE ROOF CENTER. THE RISER WILL STICK OUT 1" ABOVE THE FLASHING


RISER STICKS UP ABOUT 1" ABOVE FLASHING

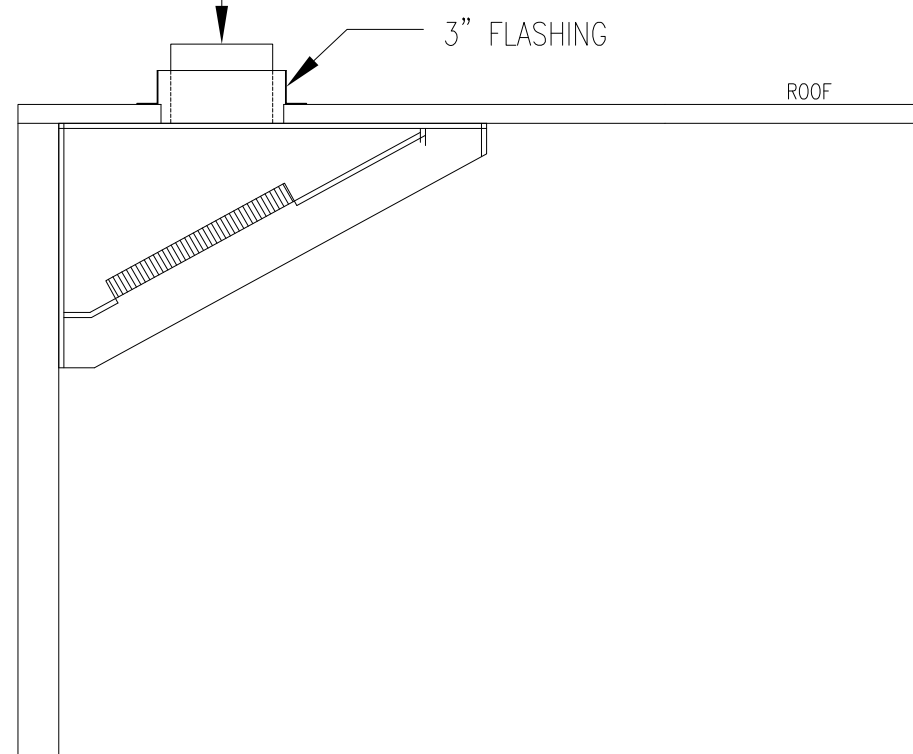

4

PLACE CAP ON TOP AND CUT IT SLIGHTLY LARGER THAN SIZE OF RISER.


STEP 4: PLACE CAP LID ON TOP OF RISER AND CUT SLIGHTLY LARGER THAN THE SIZE OF THE RISER. IT WILL COME DOWN AND FIT OVER THE FLASHING.

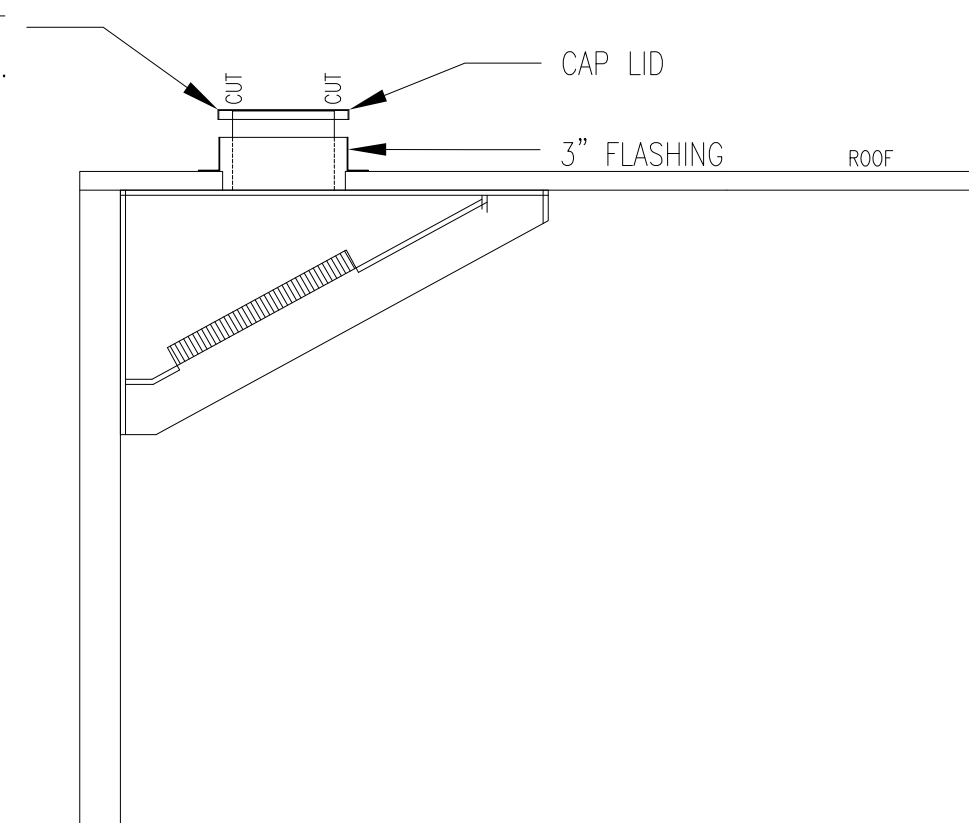

5

STEP 5: CAP LID SITS ON TOP OF THE FLASHING AND RISER WILL STICK OUT ABOVE


RISER STICKS UP ABOVE CAP LID AND FLASHING

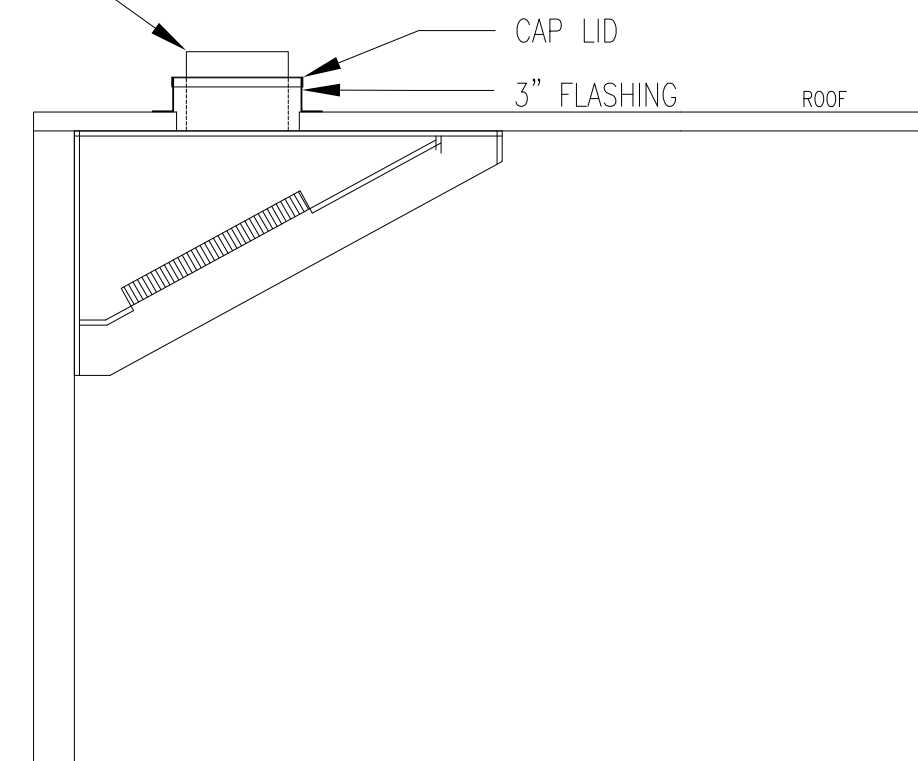

6


STEP 6: CUT DOWN THE CORNERS OF THE RISER TO CREATE 4 FLAPS

CUT THE CORNER OF THE RISER TO CREATE A FLAP. THIS WILL FOLD OVER THE CAP LID

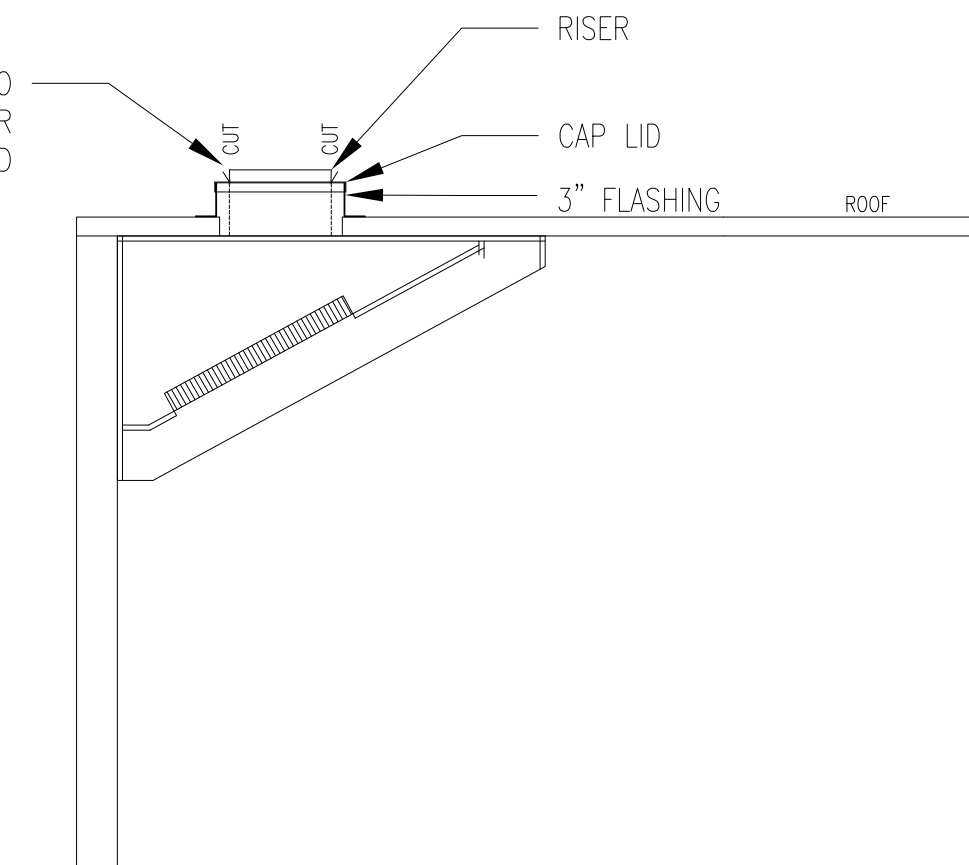


7

STEP 7: BEND/FOLD RISER DUCT OVER THE CAP LID AND SECURE IT WITH SELF TAPPING SCREWS AND SILICONE.

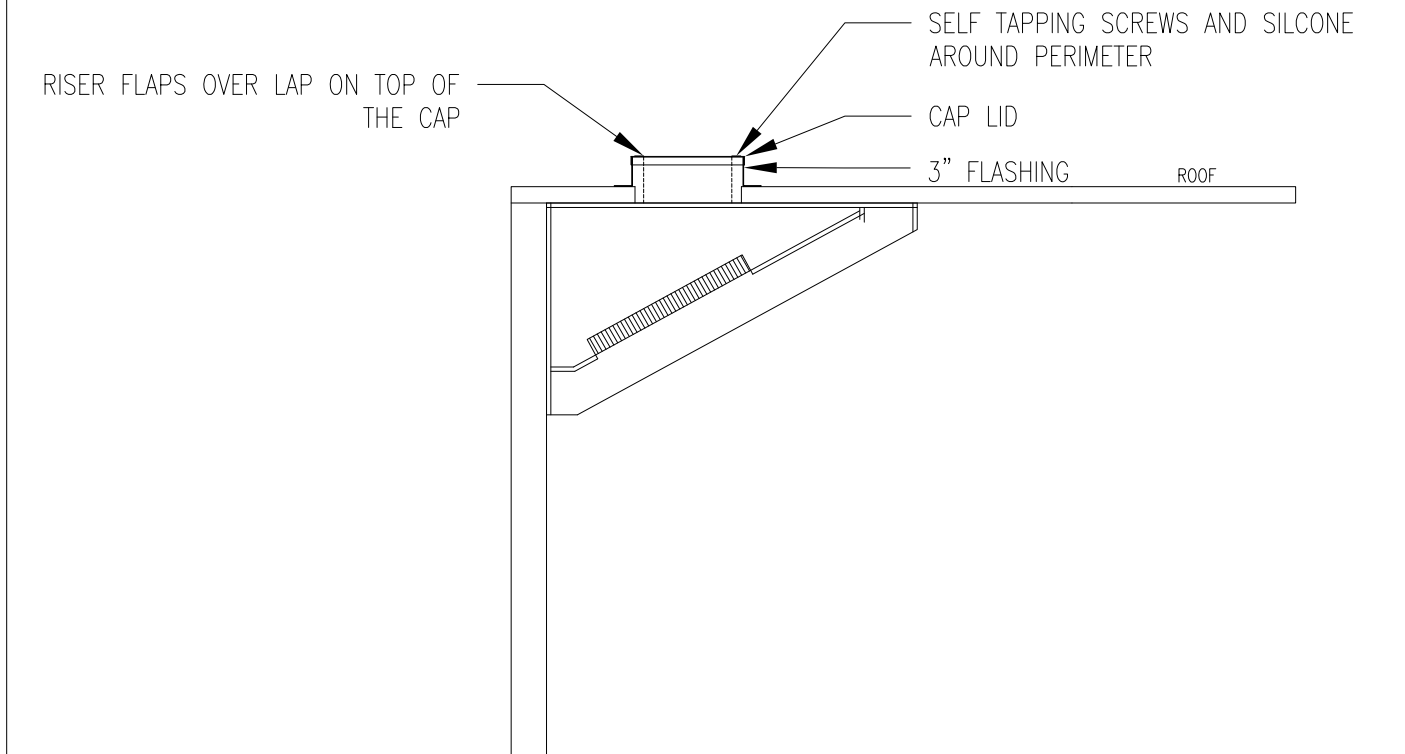

8

STEP 8: FINISHED HOOD WITH EXHAUST FAN IN PLACE

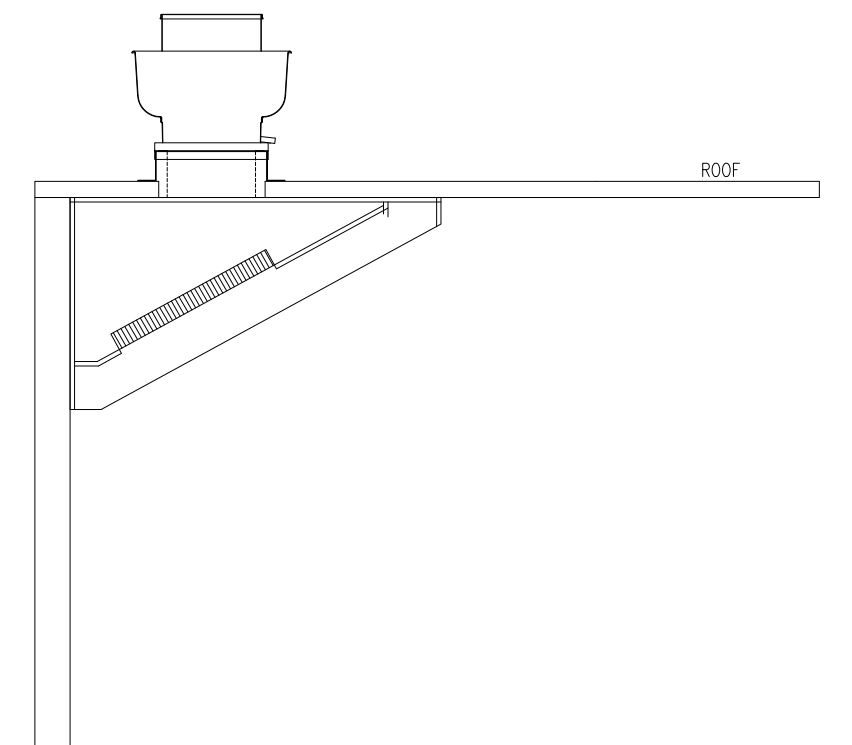

JEAN'S
RESTAURANT SUPPLY

426 S. Staples St. Corpus Christi, TX 78401
P: (361)884-9800 F: (361)888-7602 TF: 1-800-840-3610
1213 E. Pecan Blvd. McAllen, TX 78501
P: (956)688-6290 F: (956)688-6310 TF: 1-866-853-9465
www.jeansrestaurantupply.com